



NE+

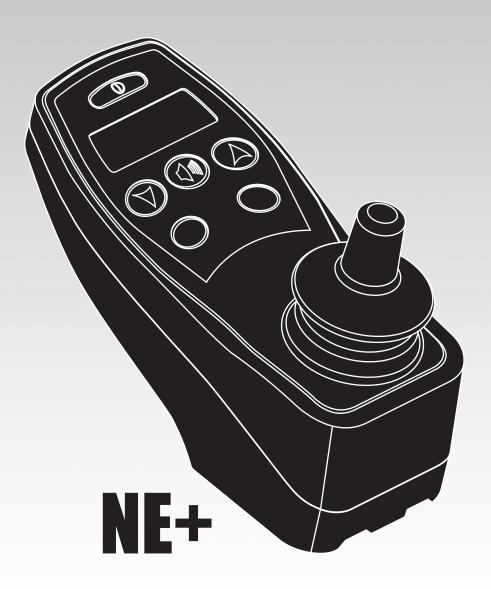

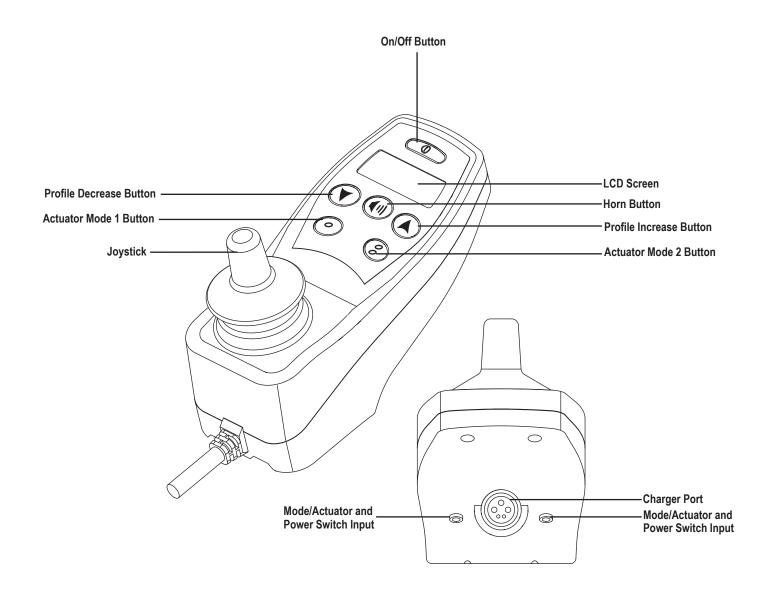

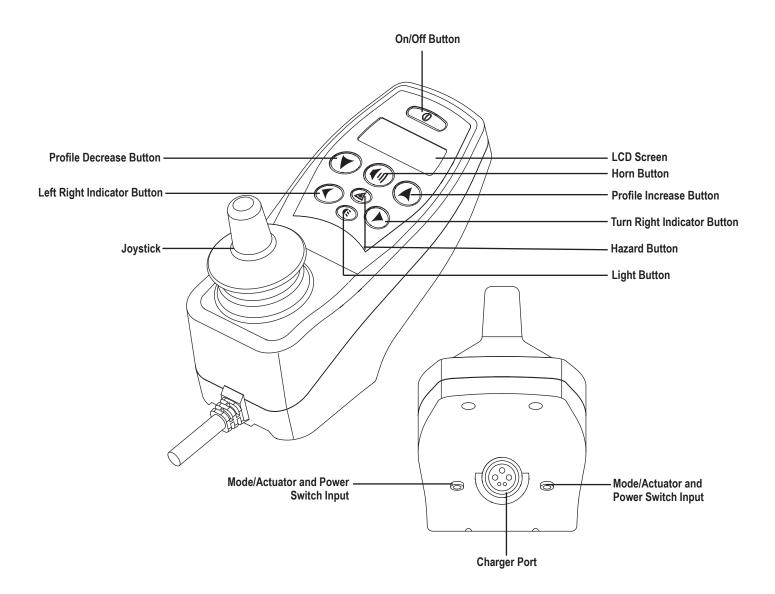

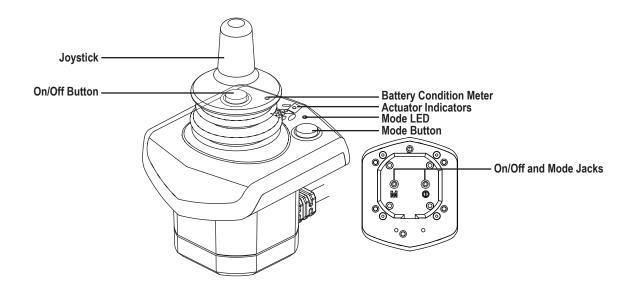

Safety Guidelines

WARNING!

A Quantum Rehab Provider or a qualified technician must perform the initial setup of this product and must perform all of the instructions in this manual.

The symbols below are used throughout this owner's manual and on the power chair to identify warnings and important information. It is very important for you to read them and understand them completely.

M WARNING!

Indicates a potentially hazardous condition/situation. Failure to follow designated procedures can cause either personal injury, component damage, or malfunction. On the product, this icon is represented as a black symbol on a yellow triangle with a black border.

MANDATORY!

These actions should be performed as specified. Failure to perform mandatory actions can cause personal injury and/or equipment damage. On the product, this icon is represented as a white symbol on a blue dot with a white border.

○ PROHIBITED!

These actions are prohibited. These actions should not be performed at any time or in any circumstances. Performing a prohibited action can cause personal injury and/or equipment damage. On the product, this icon is represented as a black symbol with a red circle and a red slash.

Intended Use:

The intended use of this Pride Mobility Products device is to provide mobility assistance to persons with mobility impairment who have the capacity to operate a motorized mobility power chair.

Regarding Devices for Prescription Use:

Our mobility products and their components are available for sale either as retail ("over-the-counter") or with a prescription. When prescribed, the following statement is applicable.

WARNING!

CAUTION! Federal law restricts this device to sale by or on the order of a physician or other certified personnel licensed by the law of the State (US only) or region in which this personnel practices to use or order the use of the device. NOTE: These instructions are compiled from the latest specifications and product information available at the time of publication. We reserve the right to make changes as they become necessary. Any changes to our products may cause slight variations between the illustrations and explanations in this manual and the product you have purchased. The latest/current version of this manual is available on our website.

NOTE: This product is compliant with WEEE, RoHS, and REACH directives and requirements.

NOTE: This product meets IPX4 classification (IEC 60529).

NOTE: The NE+ Controller and its components are not made with natural rubber latex. Consult with the manufacturer regarding any after-market accessories.

ADVISORY STATEMENT REGARDING CERTAIN COMPONENTRY INCORPORATED BY THIRD-PARTY MANUFACTURERS INTO FINISHED POWER CHAIRS: When Quantum Rehab power bases, seating systems, or other components are incorporated into a finished power chair manufactured or assembled by any third party, that third party is responsible to assure the safety, functionality, and legal compliance of the finished power chair. Quantum Rehab makes no representation concerning the safety, functionality, or legal compliance of the finished power chair or its componentry manufactured by a third party. While Quantum Rehab makes every effort to assure that our components are distributed responsibly, manufacturers, distributors, and consumers are reminded that finished power chairs must comply with a variety of standards and requirements for governmental safety and functionality.

If it is necessary to physically modify a power chair, including the addition of third-party componentry, to accommodate the medical needs of the power chair occupant, a risk assessment in conformance with ISO 14971, as outlined in ISO_7176, should be performed.

Changes to power chairs that are likely to affect conformance and risk evaluation include but are not limited to: moving the securement-point brackets; lowering the back-support height; shortening the seat length; adding secondary postural supports that are not firmly attached to the power chair; adding components that have sharp edges (i.e., edges with less than 0.08 in. [2 mm] radius); or any change that compromises the structural integrity of the power chair frame.

Table of Contents

Label Information	6
NE+ Controller	7
Precautionary Guidelines	7
Operating the NE+ Controller Joystick Keypad	7
On/Off Button	7 7
Drive Profile Screen	8 tional
Light Button (for Optional Equipment)	8 8
Controller Connector	8
Off-Board Charger/Programming Socket	8
Speed Adjustment/Profile Select	8
Actuator Adjustment	9
Attendant Control Joystick	9
Lock Mode	10
Sleep Mode	10
Thermal Rollback	10
Care and Maintenance	10
Temperature	10
Warranty	10
NE+ Error Codes	11

Product Safety Symbols

The symbols below are used on the controller to identify warnings, mandatory actions, and prohibited actions. It is very important for you to read and understand them completely.



Read and follow the instructions in the owner's manual.



Avoid exposure to rain, snow, ice, salt, or standing water whenever possible. Maintain and store in a clean and dry condition.



EMI/RFI - This product has been tested and passed at an immunity level of 20 V/m.



Disposal and recycling - Contact your Quantum Rehab Provider for information on proper disposal and recycling of your Quantum product and its packaging.

NE+ Controller

The NE+ controller is a fully programmable, modular electronic controller system that allows you to operate your power chair. It is designed to allow the user to have complete control over chair movement and speed.

The controller has been pre-programmed to meet a typical user's needs. The program is set using either a personal computer with software provided by the controller manufacturer or with a hand-held programmer, also provided by the controller manufacturer.

MARNING!

The controller program can affect speed, acceleration, deceleration, dynamic stability, and braking. If it is programmed incorrectly or outside of the safe limits as determined by your healthcare professional, it can create a dangerous situation. Only the power chair manufacturer, an authorized representative of the manufacturer, or a trained service technician should program the controller.

Precautionary Guidelines

Before operating the NE+ controller, please read the following. These guidelines are provided for your benefit and will aid you in the safe operation of the controller system.

- Turn off the power to the controller when transferring to or from your power chair.
- Follow all of the procedures and heed the warnings as explained in your power chair owner's manual.

Operating the NE+ Controller

The NE+ controller is used to operate your power chair and all of its components.

The NE+ controller consists of:

- Joystick
- Keypad
- Off-board charger/programming socket
- Controller connector
- Power module

Joystick

The joystick controls the direction and speed of your power chair. When you move the joystick from the neutral (center) position, the electromagnetic brakes release and allow your power chair to move. The farther you push the joystick from its neutral position, the faster your power chair moves. When you release the joystick and allow it to return to the neutral position, you engage the electromagnetic brakes. This causes your power chair to decelerate and come to a complete stop.

Keypad

The keypad is located directly in front of the joystick. It contains keys that you will use to control your power chair.

On/Off Button

The on/off key turns the system on and off.

M WARNING!

When faced with an emergency stop situation, release the joystick, then press the on/off to stop the power chair. Use caution. Be advised that pressing the on/off button may cause the power chair to stop abruptly.

Always turn the power off when you are stationary to prevent unexpected movement.

Horn Button

The horn button activates a warning horn.

LCD Screen

The LCD screen provides the user with easily intuited feedback information such as battery condition, key lock, actuator indicators, turn indicators, power chair speed, warnings, and error codes. **See figure 1.**

The brake, fault, warning, power base, and temperature warning indicators are only lit when the system detects a condition that triggers them. If a warning indicator is displayed, the controller will also give an audible beep.

The charging and lights indicators are lit steadily when the corresponding function is active. When these indicators are flashing, they indicate the location of a problem. See Error Codes.

The turn indicators flash as the turn indicator lights are flashing. If there is a problem, the warning icon will light and the turn indicator will flash at twice its normal rate.

Identification Key

- 1. Charging Indicator
- 2. Lights Indicator
- 3. Battery Condition Meter
- 4. Lock Out
- 5. Actuator Error Indicator
- 6. Motor Brake Fault Indicator
- 7. Drive Profile/Speed Indicator
- 8. Fault Indicator
- 9. Warning Indicator
- 10. Left Turn Indicator
- 11. Temperature Warning Indicator
- 12. Attendant Control
- 13. Right Turn Indicator

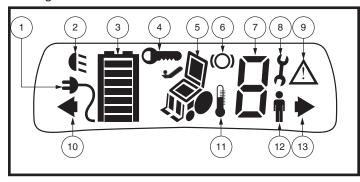


Figure 1. LCD Screen

Drive Profile Screen

Your NE+ controller may be programmed for up to five drive profiles that allow the system to be custom tailored to your environment. The drive profile may be changed by pressing the profile decrease key or the profile increase key.

NOTE: Drive profiles are set by your Pride/Quantum Rehab Provider. Contact your Quantum Rehab Provider to change or add a drive profile.

Battery Condition Meter

The battery condition meter consists of a 7-segment display on the LCD. As the battery voltage drops, the number of lights reduces from top to bottom. When the battery capacity drops to 10% or below, the bottom segment will flash.

- Bottom Segment Flashing: The battery charge is low; charge the batteries as soon as possible.
- Upward Ripple of Segments with Charging Plug: The controller is in charging mode.
- All or No Segments Flashing Quickly (Code): The controller has detected a fault; refer to the Error Code table.

Right/Left Turn Indicator Buttons (for Optional Equipment)

The right/left turn indicator buttons toggle either the left or right turn indicators. Press once to turn on and press again to turn off. You can also turn off the selected turn indicator by pressing the opposite indicator button or the hazard button.

Light Button (for Optional Equipment)

The light button turns the headlights/taillights on and off independent of other indicators.

Hazard Button (for Optional Equipment)

The hazard key activates both turn indicators at the same time. You can cancel this only by pressing the hazard button again.

Power Accessory Indicators (for Optional Equipment)

Indicates the selected power accessory. This is only for optional accessories.

NOTE: If your power chair is equipped with power accessories such as a power elevating seat or power elevating leg rests, you can operate them through the keypad buttons, joystick, mono jack switch, and attendant control. Refer to "Actuator Adjustment."

Controller Connector

This connects the NE+ controller to the power module located on the power base.

Off-Board Charger/Programming Socket

You may use an off-board charger to charge the power chair batteries through the 5-pin socket located on the front of the NE+ controller. If you use an off-board charger, the charger current should not exceed 8 amps. Contact your Pride/ Quantum Rehab Provider for more information.

MARNING!

Only chargers with Neutrik NC3MX plugs should be connected to the off-board charger/programming socket. See your Pride/Quantum Rehab Provider for more information.

NOTE: The socket may also be used for reprogramming the NE+ controller. Contact your Pride/Quantum Rehab Provider for more information.

Speed Adjustment/Profile Select

To select a speed setting or drive profile:

- 1. Press the on/off button to power on the controller.
- 2. Press the drive profile decrease or drive profile increase button until you reach the desired speed/profile setting.

NOTE: Drive profiles are set by your Pride/Quantum Rehab Provider. Contact your Pride/Quantum Rehab Provider to change a drive profile or change speed settings.

Actuator Adjustment

The NE+ controller can control up to two actuators by using the actuator buttons; using the profile decrease button and/ or the profile increase button and the joystick; using a switch in the mono jack; or using the attendant control. The active actuator is indicated by the darkened section of the seat on the display. **See figure 2.**

To select and adjust an actuator using the actuator buttons:

- 1. Press the on/off button to power on the controller.
- 2. Press one of the actuator buttons.
- 3. Hold the actuator button down to raise the actuator to the desired position, then release.
- 4. Press and hold the actuator button again to lower the actuator.

NOTE: You can simultaneously drive the power chair and operate the actuators until the actuator's preset drive lockout is reached.

To select and adjust an actuator using the decrease and increase profile buttons:

- 1. Press the on/off button to power on the controller.
- 2. Press either the profile decrease or increase button until you reach actuator mode.
- 3. Push the joystick to the right or left to cycle through the available actuators. The actuator indicators will display which actuator is activated.
- 4. When the desired actuator is selected, give a forward command to the joystick to lower the actuator or give a reverse command to the joystick to raise the actuator.

To select and adjust an actuator using the mono jack switch:

- 1. Press the on/off button to power on the controller.
- 2. Press the switch plugged into the mode/actuator jack.
- 3. Hold the switch to raise the actuator to the desired position, then release.
- 4. Press and hold the switch again to lower the actuator.

NOTE: Function of the mono jack on the joystick is set by your Pride/Quantum Rehab Provider. Contact your Pride/Quantum Rehab Provider to change the function of the jack. (For two actuators, a splitter harness will be needed.)

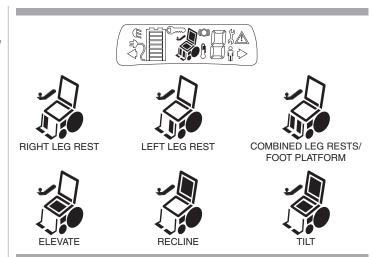


Figure 2. Actuator Selection

Attendant Control Joystick

For more information on this application, contact your Pride/ Quantum Rehab Provider.

The Attendant Control is for use by an ambulatory attendant and has the following controls:

- On/Off Button
 Enables/disables power
- Battery Condition Meter
 Indicates battery charge
- Actuator LEDs Indicates actuators in use
- Mode LED
 Used for profile selection
- Joystick
 Controls speed and direction in Drive mode; selects actuators in Seat mode.

NOTE: When in use, the Attendant Control overrides hand control commands.

Lock Mode

This controller can have a feature enabled that allows you to "lock out" unauthorized users.

To lock the controller:

- 1. Press and hold both profile keys until the system shuts
- The system is now locked.

NOTE: When the system is turned on and the system is locked, the battery condition meter and a key will be on the screen. (See NE+ Error Codes.)

To unlock the controller:

- Press the on/off key to turn on the controller. The battery condition meter and a key will be displayed on the
- 2. Move the joystick to the full forward position until the controller beeps.
- Move the joystick to the full reverse position until the controller beeps.
- 4. Release the joystick. The controller is now unlocked.

Sleep Mode

The NE+ controller offers a sleep mode feature which will shut off the main power if the joystick remains stationary for a programmed period of time from 0-240 minutes. To restore power and resume operation of the chair, push the on/off key.

Thermal Rollback

The NE+ controller is equipped with a thermal rollback circuit which monitors the temperature of the chair's motors and controller. If either exceeds the safe operating temperature, the controller reduces the output to 20% of full operation level. This reduces the chair's speed and allows a cool down period. Once the temperature returns to a safe level, the chair will resume normal operation.

NE+ Error Codes

The NE+ displays four types of messages: information, warning, temperature, and fault.

- Information: Displays information about the power chair's functionality or performance. There is no icon associated with an information message.
- Warning: Alerts you to conditions that may affect power chair functionality and performance. See figure 1.
- **Temperature:** Alerts you to conditions relating to the temperature of your power chair components that can affect functionality and performance. See figure 1.
- Fault: Alerts you to conditions that influence power chair functionality and performance.

Error codes are displayed on the LCD as icons. The following table identifies the error codes that may be easily rectified along with their probable causes and possible solutions. If you receive one of these error codes, follow the recommended solution. If the problem persists or you receive any other error code or experience any other problem with your power chair, contact your Pride/Quantum Rehab Provider.

Care and Maintenance

Refer to your power chair owner's manual for proper cleaning and disposal instructions.

Temperature

Although your power chair can withstand short-term storage temperatures between -40°F (-40°C) to 149°F (65°C), it is recommended that long-term storage temperatures be between -13°F (-25°C) and 122°F (50°C). Ideal storage conditions are 68°F (20°C) to 70°F (21°C) wherever possible, but we realize that is not always feasible due to different climates and environments.

Warranty

Refer to your power chair owner's manual for specific information on controller warranty.

*If the fault does not reset after performing the solution, contact your Pride/Quantum Rehab Provider.

Icon Display	Diagnosis	Solution
*	Power Section Fault	Cycle power. Check power module and joystick module connections and wiring.*
	Joystick Not Centered	Release joystick and make sure the joystick is in center position. Power off and on again. Check connections.*
The state of the s	Communications Fault	Check joystick cable connections.*
()	Motor/Brake Fault	Check motor/brake connectors.*
	Low Battery Voltage	Charge batteries. This may take 12 to 14 hours to fully charge the batteries.
	High Battery Voltage	Disconnect charger.
	Drive Thermal Warning	Allow motor to cool.*
	Open Motor Fault	Check motor connectors.*
(X)	Left Indicator Fault	Press left indicator key.*

Table 1: NE+ Error Codes

Icon Display	Diagnosis	Solution
()	Right Indicator Fault	Press right indicator key.*
()	Hazard Indicator Fault	Press hazard key.*
T X	Running Lights Fault	Press light key.*
	Speed Limit Warning	Return seat to normal or upright position.*
17115	Low Battery	Charge batteries. This may take 12 to 14 hours to fully charge the batteries.
→	Battery Charging Inhibit: Joystick powered on	Unplug charger when charging is complete.
	Battery Charging Inhibit: Joystick powered off	Unplug charger when charging is complete.
	Idle Mode	Cycle power. If it continues, contact your Pride/Quantum Rehab Provider.
¥ 1	Attendant Control Fault	Check Attendant Control connections and wiring.*
	NE+ Controller is locked out	Unlock controller. See Lock Mode in Table of Contents.

Table 1: NE+ Error Codes

NE+

USA

401 York Avenue Duryea, PA 18642 www.quantumrehab.com

Canada

5096 South Service Road Beamsville, Ontario L3J 1V4 www.quantumrehab.ca

Australia

20-24 Apollo Drive Hallam, Victoria 3803 www.quantumrehab.com.au

New Zealand

3-5/208 Swanson Road Henderson, Auckland 0610 www.pridemobility.co.nz

UK

(Authorised UK Representative) 32 Wedgwood Road Bicester, Oxfordshire OX26 4UL www.quantumrehab.co.uk

The Netherlands

(Authorised EU Representative)
De Zwaan 3
1601 MS Enkhuizen
www.quantumrehab.eu
www.quantumrehab.nl

Switzerland

(Authorised CH Representative) SODIMED SA Chemin Praz Devant 12 1032 Romanel-sur-Lausanne

Italy

Via del Progresso, ang. Via del Lavoro Loc. Prato della Corte 00065 Fiano Romano (RM) www.quantumrehab-italia.it

France

26 Rue Monseigneur Ancel 69800 Saint-Priest **www.quantumrehab.fr**

Spain

Calle Las Minas Número 67
Polígono Industrial Urtinsa II, de Alcorcón 28923 Madrid
www.quantumrehab.es

Germany

Hövelrieger Str. 28 33161 Hövelhof www.quantumrehab.de

China

Room 508, Building #4 TianNa Business Zone No. 500 Jianyun Road Pudong New Area Shanghai 201318 www.pridechina.cn

